


Quick guide for using the TrekStor **USB-MusicStick 90**

- MP3 / WMA audio playback
- Voice recording
- A-B repeat (loop)
- USB mass storage device



Windows 98 users can get the driver required for the device from the Internet support page at www.trekstor.de.

• Controls for the TrekStor **USB-MusicStick 90**

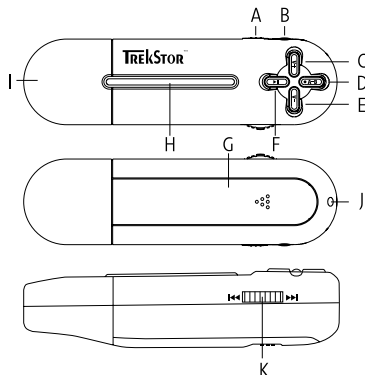

- A switch
- B Earphone jack
- C Volume **V+**
- D Repeat and record **A-B**
- E Volume **V-**
- F Play/Pause **▶||**
- G Battery compartment (cover)
- H Display bar – red and blue LED
- I USB connector (cap)
- J Neck strap holder
- K **◀◀ STOP/OFF ▶▶**

• Before using the TrekStor **USB-MusicStick 90**

Remove the cover to the battery compartment to insert the AAA alkaline battery. Make sure that the positive and negative ends "+ / -" match. Then put the cover back on.

• Connecting the TrekStor **USB-MusicStick 90** to a PC

*Note for users of Windows 98: First download the driver from our homepage at <http://www.trekstor.de>. Then install the driver before connecting the **USB-MusicStick 90** to your PC.*

Connect the **USB-MusicStick 90** to a USB port in your PC. Your operating system will immediately recognize the **USB-MusicStick 90** and will add a "Device with Removable Storage" under "My Computer".

- Exchanging data with the TrekStor **USB-MusicStick 90**

- 1) Select the desired files with your mouse. Copy these files by clicking them with your right mouse button and then selecting "Copy".
- 2) Under "My Computer", select the removable disk "TrekStor USB MusicStick 90".
- 3) Click it with your right mouse button, and select "Paste" to start copying. After copying is over, the data will be available on the **USB-MusicStick 90**.

Note: The red and blue LEDs flash when data is being transmitted.

- Logging off and unplugging the
TrekStor **USB-MusicStick 90** from the PC

Windows 98 (SE): Look for the **USB-MusicStick 90** under "Device Manager" (under "Drives"), and click the device with the left mouse button. Select the menu item "Remove". You can now disconnect the **USB-MusicStick 90** from the PC.

Windows 2000/ME/XP: At the bottom right on the task bar, click your right mouse button on the symbol  "Safely remove hardware". In the context menu that appears, click the left mouse button on "Safely Remove Mass Storage Device - Drive" to select it. You can now disconnect the **USB-MusicStick 90** from the PC.

Note: Please follow the recommended logoff procedure to prevent damage to the device or data loss.

- Operation of the TrekStor **USB-MusicStick 90**

Playing back audio and voice recordings

- Turn on

To turn on the TrekStor **USB-MusicStick 90**, hold down the  button for approximately 2 seconds.

Note: Make sure that the  switch has been moved to the left, i.e., that the button lock is turned off.

- Turn off

Hold down the  button for approximately 2 seconds to turn off the TrekStor **USB-MusicStick 90**.

- Playback

Briefly press the  button to start playback. The LED in the blue display bar starts flashing.

- Pause

Briefly press the  button to stop playback. The LED in the blue display bar stops flashing. Repress the  button to continue playback.

- Stop

Briefly press the  button to stop playback.

- Increase/decrease volume

Briefly press the  and  buttons to easily control the volume.

- Change song

Briefly press the  button to the left  or right  to switch to a different song during playback:

• Next song: Press the  button to the right .

• Previous song: Press the  button to the left .

- Rewind/Fast Forward within a song

Press and hold the  button to the left  or right  to rewind or fast forward within a song during playback. Press to the right  to fast forward, and press to the left to rewind .

- Repeat loop 

Mark the start of a repeat loop by briefly pressing the  button. Activate the end of the repeat loop by again pressing the  button.

End the repeat loop by briefly pressing the  button.

- Changing from music playback to voice playback

With the **STOP/OFF** button, you can switch between the two playback modes.

- Music playback: Press and hold the **STOP/OFF** button to the right **▶▶** until the blue LED shines on the display bar.
- Voice playback: Press and hold the **STOP/OFF** button to the left **◀◀** until the red LED shines on the display bar.

Note: Make sure that you are not playing an audio file when you switch.

Voice recording

Follow the steps below to record:

- 1) Press the **STOP/OFF** button or the **▶||** button to end music playback.
- 2) Press and hold the **STOP/OFF** button to the left **◀◀** until the red LED shines on the display bar.
- 3) Press the **A-B** button to start recording. The red and blue LEDs flash during recording.
- 4) To end recording, press the **A-B** button and wait until the recording is saved.
The red LED shines to indicate that the recording has been successfully saved.
- 5) Press the **▶||** button to playback the saved voice recording.

Package contents

- TrekStor **USB-MusicStick 80**
- Stereo earphones
- AAA battery

The manufacturer retains the right to continuously improve the product. These changes may be made without being directly described in these instructions. For this reason, the information provided in this quick guide may not reflect the current state of the art.

The manufacturer only guarantees suitability for the product's intended purpose. In addition, the manufacturer is not responsible for damages or loss of data and subsequent consequences.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation. All other registered trademarks and the registered trademarks cited in this manual are the property of their respective owners and are hereby acknowledged.

TrekStor GmbH & Co. KG · Kastanienallee 8 – 10 · D-64653 Lorsch

Support: E-Mail: support@trekstor.de

www.trekstor.de